

7. Remove the compression coil.

NOTE

When reinstalling the compression coil, place it so that its close-coiled end faces the Separator Unit.

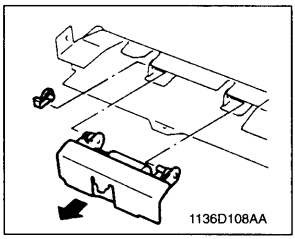

8. Remove one C-clip and the Separator Assy.

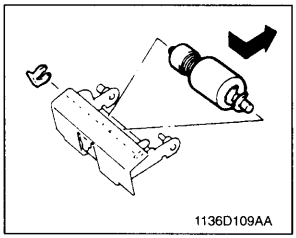

9. Remove one C-clip and the Separator Roll Assy.

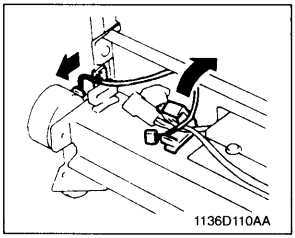

10. Remove the harness from the edge cover and cord clamp.

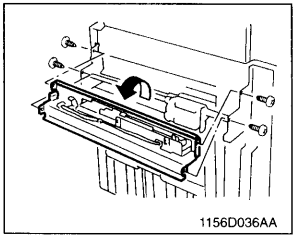

11. Remove four screws and the Solenoid Mounting Bracket.

NOTE

When the solenoid has been replaced or the solenoid mounting screws removed, be sure to adjust the position of the solenoid. (For the adjustment procedure, see p. D-98.)