

12. Remove two set screws and the electromagnetic spring clutch.

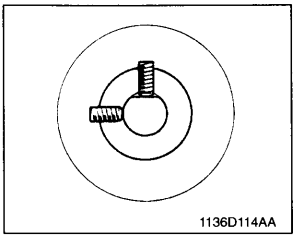

NOTES

- *When reinstalling the electromagnetic spring clutch, orient the Paper Take-Up Roll shaft and the clutch as shown on the left.*
- *The end of the clutch must be flush with or slightly recessed (up to 1 mm) from the end face of the Paper Take-Up Roll shaft. (The roll shaft should never protrude.)*
- *There must be a gap of 1 mm or more at A when the Paper Take-Up Roll shaft is pushed in the direction of the arrow.*

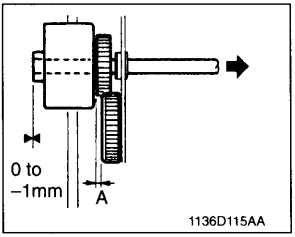

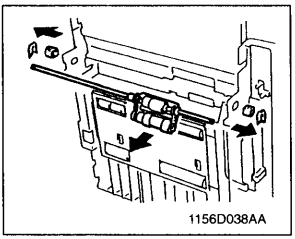

13. Snap off two C-clips and remove the Paper Take-Up Roll Assy.

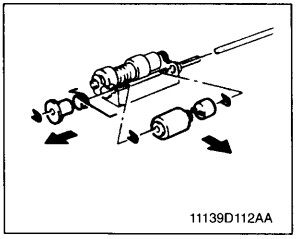

14. Snap off three C-clips and remove the Feed Roll.