



4. Pass the longer length of the cable through the hole in the light blocking plate.
5. Slide the Cable Drive Gear onto its shaft and insert a wrench into the hole (4-mm dia.) to position the gear.

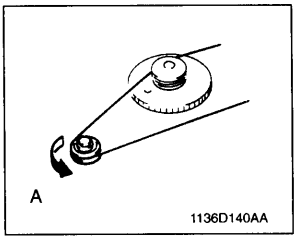


6. Wind the shorter length of the cable around pulley A.

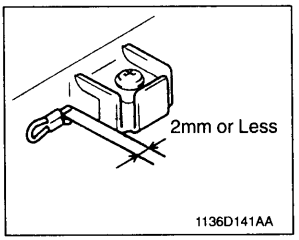

7. Secure the shorter length of the cable to the Cable Fixing Bracket.

NOTE

Ensure a distance of 2 mm or less for the dimension shown on the left.

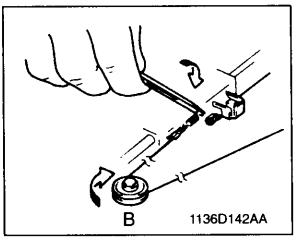

8. Wind the longer length of the cable around pulley B.
9. Hook the spring onto the longer length of the cable and pull the spring to hook it onto the shorter length of the cable.
10. Remove the wrench and peel off the two pieces of tape used in steps 2 and 3.