
(3) Replacement of the PC Drum

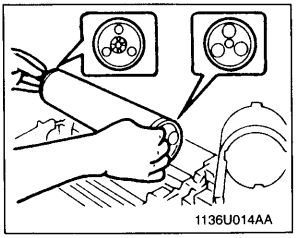


1. Slide out the IU.
2. Loosen one screw and remove the stopper.
3. Remove and replace the PC Drum.

NOTE


When the PC Drum has been replaced, reset the count of "PC Drum" of "Port/Option" counters of the Tech. Rep. mode and then make the "adjustment of exposure level in the Auto Exposure mode." (For the "adjustment of exposure level in the Auto Exposure mode," see p. D-72.)

(4) Cleaning of the Developer Scattering Prevention Plate

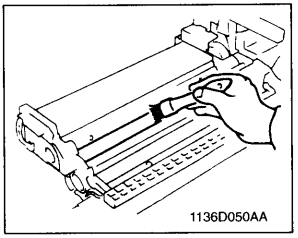


Using a brush, whisk dust off the Developer Scattering Prevention Plate.

(5) Cleaning of the Ds Positioning Collars

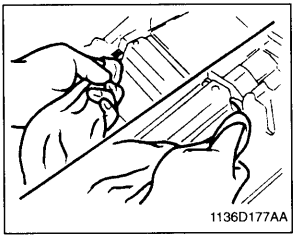


Using a brush or a soft cloth dampened with alcohol, clean the Ds Positioning Collars.

(6) Cleaning of the Toner Antispill Trap

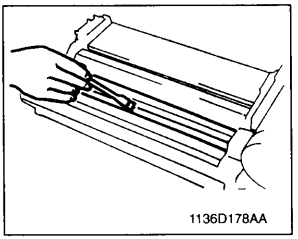

Using a brush or a vacuum cleaner, clean the Toner Antispill Trap.

(7) Cleaning of the Cleaning Blade

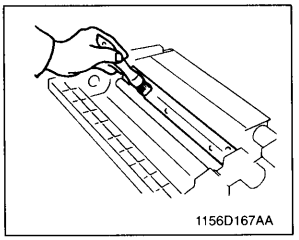

Using a brush, whisk paper dust and toner off the Cleaning Blade.