(8) Replacement of the Cleaning Blade

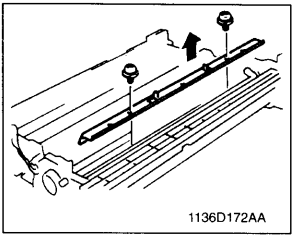

1. Remove and replace the Cleaning Blade.

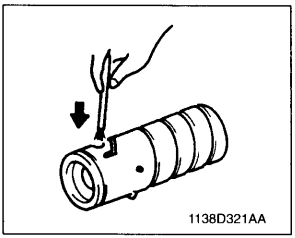

2. Remove the Toner Bottle from the IU. Insert a brush through the toner port and into the toner.

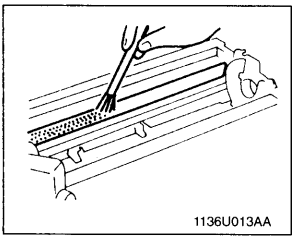

3. Apply toner to the entire surface of the new Cleaning Blade.

> ***NOTE***
> *Be sure to apply toner to both end faces of the Cleaning Blade.*

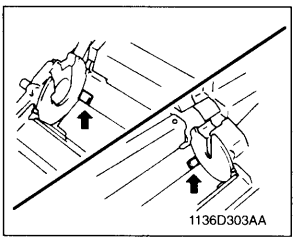

4. Using the brush, apply lubricant shipped with the Cleaning Blade to the two side seals shown.