

5. Install the PC Drum.

NOTE

Do not touch the surface of the PC Drum with bare hands. Hold onto both ends of the PC Drum when installing the drum.

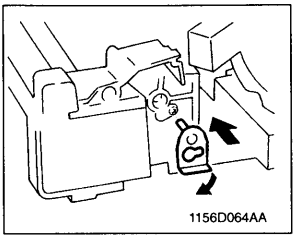

6. Fit the PC Drum stopper and tighten the screw.

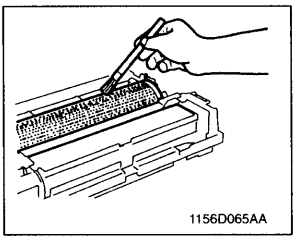

7. Apply a thin coat of toner to the surface of the PC Drum.

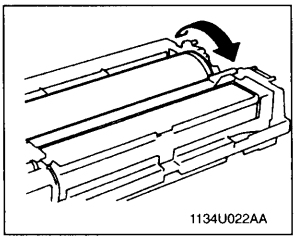

8. Holding onto both ends of the PC Drum, turn the PC Drum one complete turn in the forward direction.

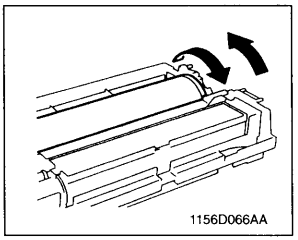

9. Holding onto both ends of the PC Drum, turn the PC Drum 1/2 turns in the backward direction.
10. Holding onto both ends of the PC Drum, turn the PC Drum 1/2 turns in the forward direction.