


4. Unplug one connector in the rear and remove Image Erase Lamp LA2.


> ***NOTE***
>
> *When Image Erase Lamp LA2 has been removed, make the "adjustment of edge erase." (For the adjustment of edge erase, see p. D-93.)*

(17) Removal of the Ozone Filter (PC Drum Charge Corona)

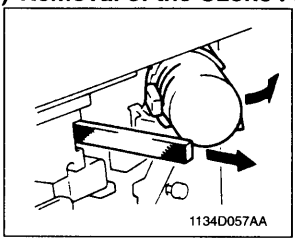


1. Swing down the Front Door.
2. Swing out the Main Hopper.
3. Slide out the Ozone Filter.

(18) Removal of the Ozone Filter (Image Transfer/Paper Separator Coronas)

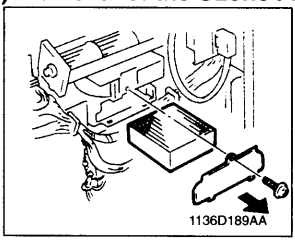

1. Remove the Rear Cover.
2. Remove one screw and the Filter Cover.
3. Pull out the Ozone Filter.

(19) Removal of the Toner Collecting Box (Except the U.S.A., Canada, and Europe)

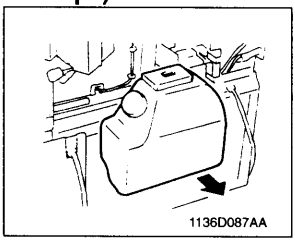

1. Remove the Rear Cover.
2. Remove the Toner Collecting Box.
   *For removal of the large capacity Toner Collecting Box, please refer to the instructions on the large capacity Box.