
5. Touch the shift key [◀] or [▶] to change the setting value.
6. Touch [Enter] to validate the setting.

Setting Instructions

- If dimension A on the copy is longer than 5.5 mm, decrease the setting value.
- If dimension A on the copy is shorter than 0.5 mm, increase the setting value.

*If the measurement does not fall within the specifications through one setting, try another setting.

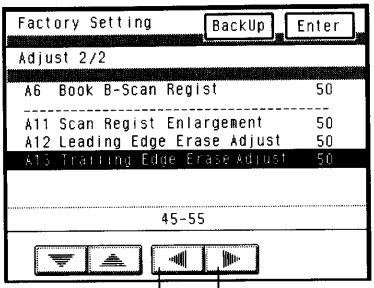

NOTE

Be sure to touch [Enter] before pressing the Panel Reset Key to return the copier to the Basic screen. If this is not done, the old setting remains valid.