(14) Adjustment of Edge Erase

◆ **Requirement**

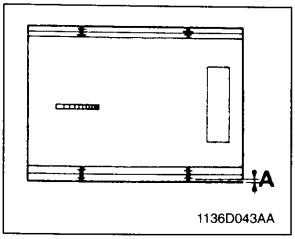

- Dimension A, which is the erase width from the front edge on the copy of the GTC-test chart, should be in the range between 0.5 mm and 4.0 mm.

◆ **Important**

This adjustment must be made after the "adjustments of reference positions".

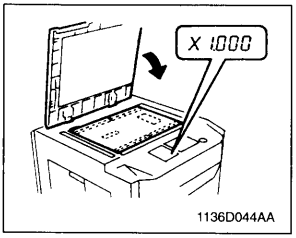

1. Place the GTC-test chart face down on the Original Glass and align its rear left corner with the reference marker on the Original Width Scale. Then, lower the Original Cover.
2. Make a single copy on A3 or 11" × 17" paper in full size mode.
   *If A3 or 11" × 17" paper is not available, use A4 or 8–1/2" × 11" crosswise paper.

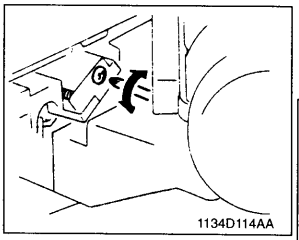

3. If the front edge erase width deviates from the specifications, adjust as necessary by turning the Edge Erase Adjusting Screw.

Adjusting Instructions

- If dimension A on the copy (of the original width of 3.0 mm) is narrower than 0.5 mm, tighten the Adjusting Screw.
- If dimension A on the copy (of the original width of 3.0 mm) is wider than 3.0 mm, loosen the Adjusting Screw.