

17 MAIN ERASE LAMP

Main Erase Lamp LA2 is turned ON to neutralize any surface potential remaining on the surface of the PC Drum after cleaning.

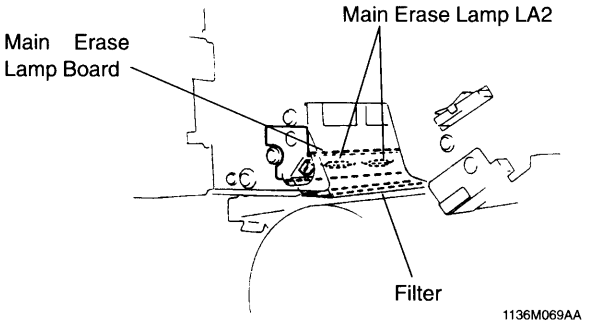

- Main Erase Lamp LA2 consists of ten tungsten filament lamps mounted side-by-side on a board. A filter is installed between LA2 and the PC Drum to protect LA2 from contamination.

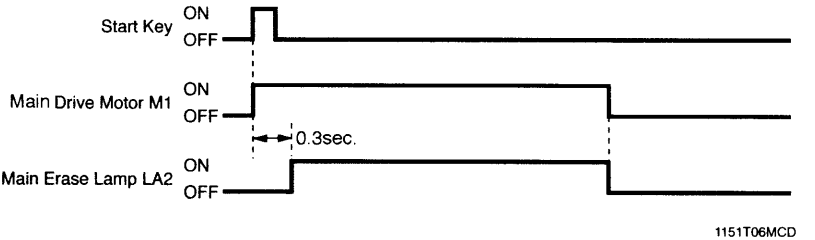

	Control Signal	ON	OFF	WIRING DIAGRAM
LA2	PWB-A PJ12A-3	H	L	1-L