

25 DEHUMIDIFYING SWITCH

To prevent image transfer efficiency from being reduced due to damp paper in highly humid weather, Paper Dehumidifying Heater H3 (Optional) is installed on the base frame of the copier under the 2nd Drawer.

Drum Dehumidifying Heater H2 (Standard) is located under the Lower Synchronizing Roller to prevent the PC Drum from forming condensation.

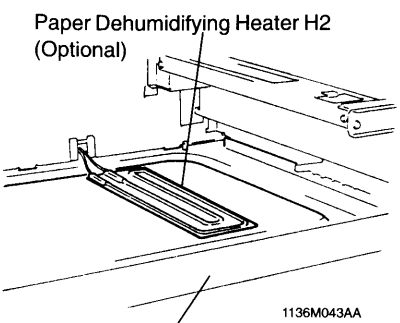

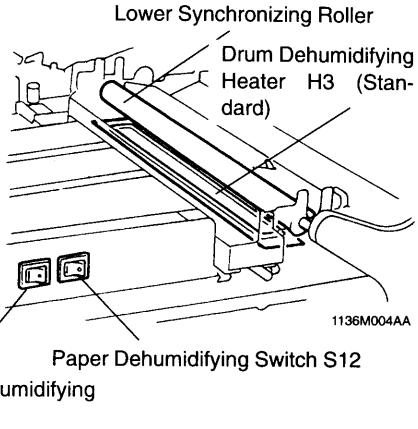

- H2, H3 ON/OFF Conditions

	Dehumidifying Switch ON		
	Power cord Plugged in	**Power Switch ON**	***During a copy cycle**
H2	ON	OFF	OFF
H3	ON	ON	OFF

*During a copy cycle: Refers to the period of time between when the Start Key is pressed and when Main Drive Motor M1 is deenergized.