
3 PAPER TRANSPORT FAILURE

1156SBT0301A

3-1. Paper Misfeed

When a paper misfeed occurs, the Touch Panel shows the corresponding message, misfeed location and paper location.

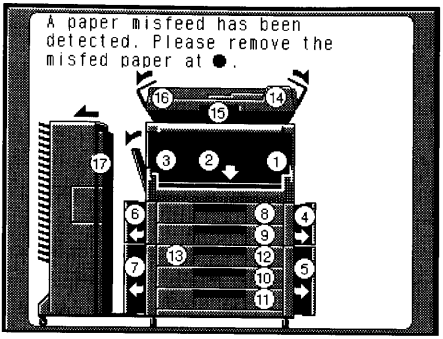

1149T002CA

Blinking Light	There is a misfeed at that location.
Steady Light	There might be a sheet of paper stopped at that location.

*When option is installed

Blinking/Steady LED	Misfeed/Paper Location	Ref. Page	
①	Multi Bypass take-up and transport	T-22	
②	Transport/separator	T-20	
③	Fusing/exit	T-24	
④	Copier take-up/vertical transport	T-17,18	
④,⑤	Paper Feed Cabinet take-up/vertical transport	T-25 to 28	*
⑥,⑦	Duplex Unit vertical transport	T-30	*
⑧	1st Drawer take-up	T-17	
⑨	2nd Drawer take-up	T-17	
⑩	3rd Drawer take-up	T-25 to 28	*
⑪	4th Drawer take-up	T-26	*
⑫	Duplex Unit take-up	T-32,33	*
⑦, ⑬	Duplex Unit storage	T-31	*
⑭	ADF take-up	–	*
⑮	ADF transport	–	*
⑯	ADF turnover/exit	–	*
⑰	Sorter	–	*
⑱	LCC	–	*

<Display Resetting Method>

When misfeed occurs in the copier	Open and close the Front Door.
When misfeed occurs in the option (except Duplex Unit)	Raise and lower the option, or slide the option away from, and back up against, the copier.