22) C0E00: Main Erase Lamp LA2's Failure to Turn ON
C0E01: Main Erase Lamp LA2 Turning ON at Abnormal Timing

Relevant Electrical Parts	
• Main Erase Lamp LA2	• Master Board PWB-A

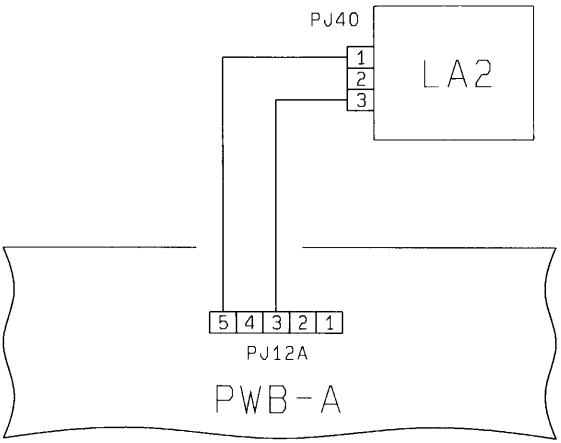

1156C22TAA

◆C0E00

Step	Check Item	Result	Action
1	Perform the "Controller Board Check." Is malfunction code "C0328" displayed?	YES	Change PWB-A.
2	Does the voltage across PWB-A PJ12A-3 and GND change from DC0V to DC24V when the Start key is pressed?	YES	Change LA2.
		NO	Change PWB-A.

◆C0E01

1	Check the LA2 Failure Detection signal when LA2 is OFF. Using the IC Port Data Check function, check that the data of PWB-A (IC4A) APC7 is "H."	YES	Change PWB-A.
		NO	Change LA2.