


2 DISASSEMBLY

2-1. Identification of Covers

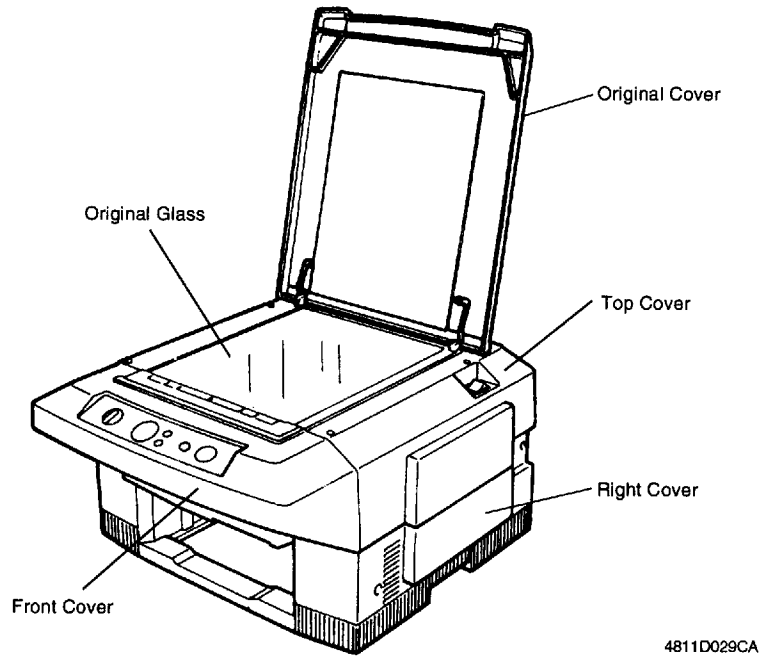

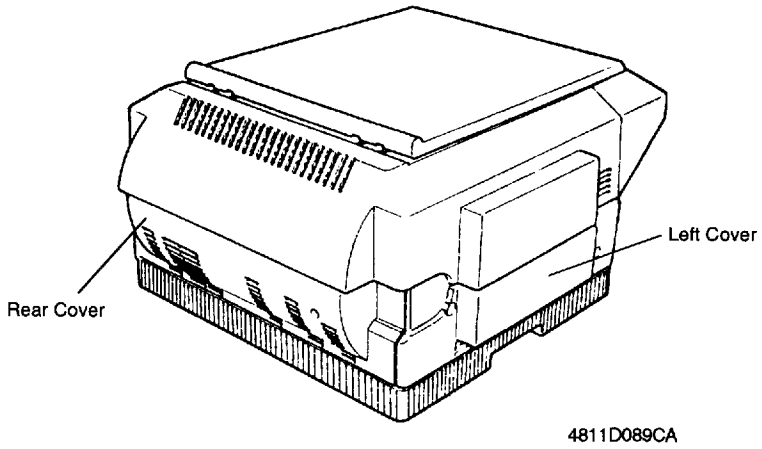


2-2. Removal of the Original Cover

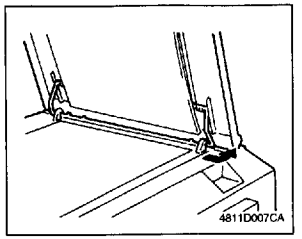


1. Raise the Original Cover. While swinging out the metal fitting serving as the axis of the Original Cover, further raise and remove the Original Cover.

2-3. Removal of the Top Cover

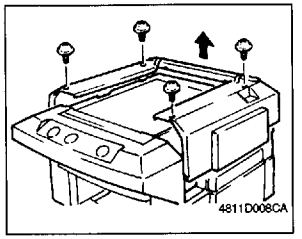


1. Remove the Original Cover.
2. Remove four screws and the Top Cover.

2-4. Removal of the Rear Cover

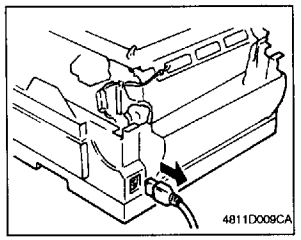


1. Remove the Original Cover and Top Cover.
2. Disconnect the power cord plug.

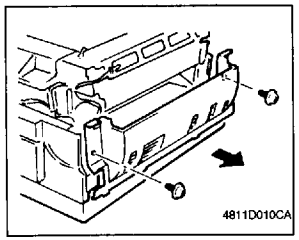

3. Remove two screws and the Rear Cover.

2-5. Removal of the Right Cover

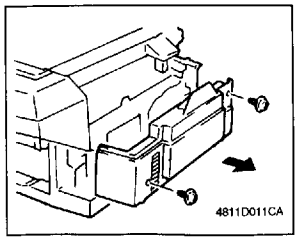

1. Remove the Original Cover and Top Cover.
2. Remove two screws and the Right Cover.