

2. Exchange EEPROM from OLD to the NEW PWB-A.
3. Reassemble PWB-A and connect to harnesses and reinstall the Front Cover.

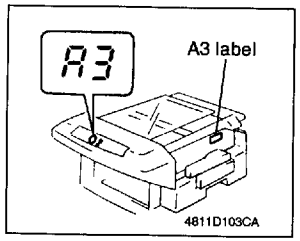

4. Plug in Power Cord and enter Adjusting Mode A3. Read value on A3-label of new PWB-A and put in this value to panel.

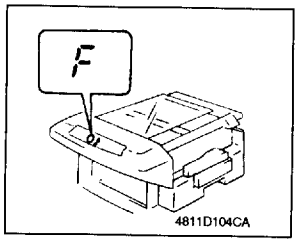

5. Enter the Function Mode.
   5.1. Make Display Test F.
   5.2. Make Passing Test F1.
6. Assemble Housing Covers.
7. Check Leading Edge Registration and Leading Edge Width following 3-3 and 3-4.
   It is not OK, change by using Function Mode F4/F5.

2-25. Exchange of Wire Rope at Scanner Sliders

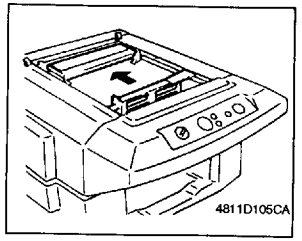

1. Remove Cassette, Start machine until 2nd slider is not located under the front glass plate holder and stop by Switching OFF Main Switch.
2. Remove Original Cover and Top Cover.
3. Secure 2nd slider against force of back-pulling spring.

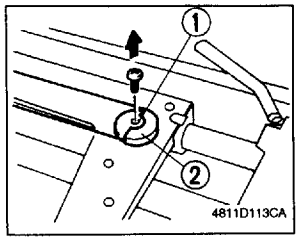

4. Remove screw ① which fixes the turning roll ② for drive cable to the 2nd slider.

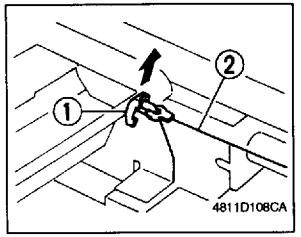

5. Pull upwards plastic part ① at 1st slider at the right side which also secures the Auxiliary Reflector.
6. Remove the ring at cable end ② from bracket of 1st slider.

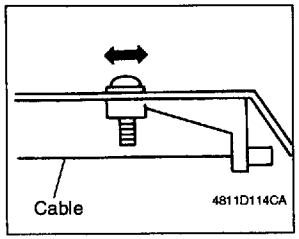

7. Carefully mark the position of the cable holder which is fixed at the rear glass plate holder within 0.1mm.

NOTE

The position of the rear cable holder is a important optical adjustment item.

8. Open the screw and remove cable from holder.