3-5. Adjustment of the Maximum Exposure Lamp Voltage

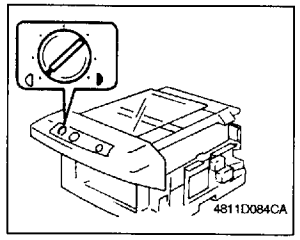

1. Remove the Original Cover, Top Cover and Right Cover.
2. Turn the Exposure Control Knob full counterclockwise. (Maximum light position)

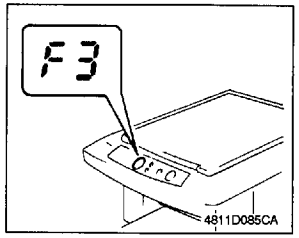

3. Hold down the Up and Down Keys and turn the Power Switch to ON start up the function mode, and select the F3 mode.

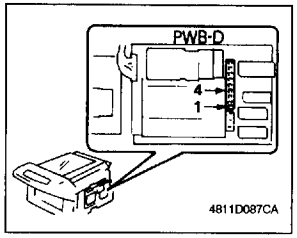

4. Connect a RMS multimeter across Terminals 1 and 4 of PJ3D on the Power Board and depress the Start Key.

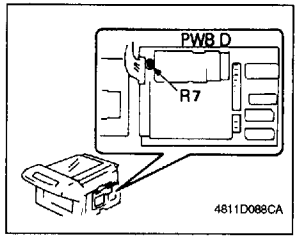

5. Turn Variable Resistor R7 on the Power Board to adjust the Exposure Lamp voltage to 147 (+2) V_{eff}.

Intentionally left blank